



DC3300 Dust Collector Switch Update and Service Information

The following information pertains to all Shopsmith DC3300 Dust Collectors, If you are repairing a Dust Collector with has a Date Code of 10/14/92 or later, please refer to items 1 & 2 below. If you are repairing a Dust Collector, which contains a Date Code earlier than 10/14/92, please refer to Item #2 below.

1. The following Part Numbers have changed. Please update your Dust Collector Instruction Manual.

Ref. No. 34, Part No. 514820, Description - Electric Switch, Qty. 1, SHOULD NOW READ
Ref. No. 34, Part No. 522560, Description - Electric Switch, Qty. 1

2. The following Parts/Part Numbers have changed. Please update your Dust Collector Instruction Manual.


You have ordered 556090, for repairing the electric switch on your Dust Collector. It contains 522560 - Electric Switch (1).

If the old Switch being replaced has four terminals on the back:

- Attach the four Single Terminals of the wiring harness to the new Switch in their same locations. Be sure to push each terminal on to the switch as far as it will go.

If the old switch being replaced has two terminals on the back:

- Attach the same two Single terminals to the new Electric Switch. Install both terminals on the same side of the switch. Be sure to push each terminal on to the switch as far as it will go.

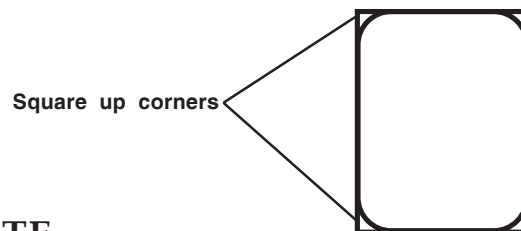

NOTE

It may be necessary to slightly modify the switch opening to allow the new Switch to be inserted in place. Use a metal file to square up the corners of the switch opening as shown.

NOTE

If you have further questions or need additional help, contact our customer service department Toll Free 800/762-7555. Also, visit our website www.shopsmith.com

