



## Supplement on using a Ground Fault Interuppter

---

When using your PowerPro with a GFIC plug, there are two options:

1. Remove the ground fault receptacle in the wall and replace it with a standard 15 Amp receptacle. Then install (or have an electrician install) a ground fault breaker in the breaker box. The breakers do not blow where the outlets trip when the PowerPro Headstock is plugged in and turned on.

**Or,**

2. He can plug the PowerPro into a non-GFIC Plug.



Shopsmith Inc.  
6530 Poe Avenue  
Dayton, Ohio 45414

877127

Rev A

12/10

©2010 Shopsmith, Inc.  
All Rights Reserved  
Printed In U.S.A.



## Supplement on using a Ground Fault Interuppter

---

When using your PowerPro with a GFIC plug, there are two options:

1. Remove the ground fault receptacle in the wall and replace it with a standard 15 Amp receptacle. Then install (or have an electrician install) a ground fault breaker in the breaker box. The breakers do not blow where the outlets trip when the PowerPro Headstock is plugged in and turned on.

**Or,**

2. He can plug the PowerPro into a non-GFIC Plug.



Shopsmith Inc.  
6530 Poe Avenue  
Dayton, Ohio 45414

877127

Rev A

12/10

©2010 Shopsmith, Inc.  
All Rights Reserved  
Printed In U.S.A.